Wii U INTERACTIVE MARIO KART 8 FLAG

Please Read Through The Entire Instruction Sheet Before Beginning Assembly

ASSEMBLY:

If you have questions or need a replacement, please reach out to your Nintendo Representative or contact Display Technical Support (800-875-1852).

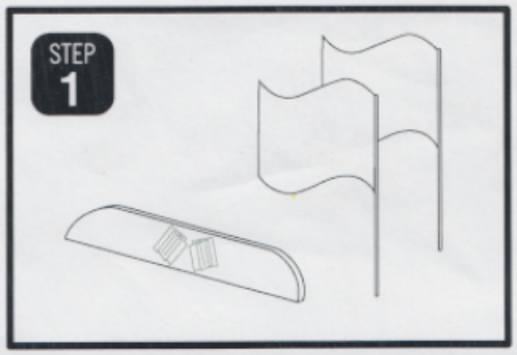

Locate the two flags and one black panel fixed with flag grippers and REMO tape.
(Not shown to scale)

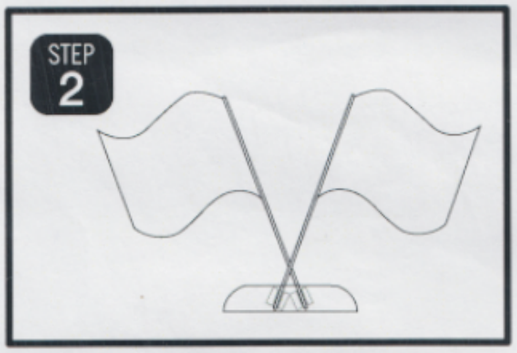

Mount flags by pushing the flag pole down into the opening of the flag gripper. The end of the flag pole should be flush with the bottom of the flag gripper.

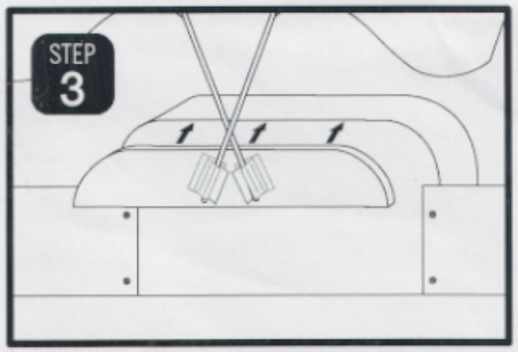

Remove REMO tape liner. On the backside of the Interactive Display, attach the black panel by aligning the top of the panel to the top edge of the Wii U Logo tab and pressing to adhere.

Your mounted flags should be centered above the Wii U Logo.

GameStop Wii U INTV Graphics WUPM12SP

Nintendo

83424 - GRAPHIC, SHRD MON MARIO KART 8 GS

2 MK8 flags and attach per display
0083498, PREMIUM, FLAG MK8
100017 - HOLDER, FLAG MARIO KART 8



Playbook
for event only

NMI-covered GameStop
Kit 83576 - KIT, CAT-I
UPD MAY '14 WUP-
USA-GS

83425 - GRAPHIC, SHRD
LWR LF MARIO KART 8GS

Backside of Interactive Graphic

83426 - GRAPHIC, POSTER BACK
MARIO KART 8GS

Wii U Floor Interactive Graphic Replacement Procedure

1. Estimated Install Time

About 15 minutes

2. Parts Provided

None

3. Tools Required

- Plastic label peeler
- Window cleaner and cloth
- Electrical or similar tape
- Scissors

4. Instructions

Read these instructions completely before starting the procedure. These instructions describe the basic recommended techniques to install or replace graphics on both the Multi-Game (MG) and Simplified Playable (SP) interactive displays. Refer to the graphic placement guide for additional details on the placement location for each graphic.

4.1 Replace Monitor Shroud Graphic

1. Remove the GamePad from the bracket and let it hang in front of the display pedestal so it won't accidentally fall off the bracket during this process.

2. Use a label peeler to lift up the corner of the graphic and gently peel it from the monitor shroud.

3. Use window cleaner and a cloth to clean the surface for the new graphic. Let the surface dry completely.

4. Prepare two or three pieces of tape about two inches long each and stage them nearby, such as on the pedestal.

5. Without removing the film, position the new monitor shroud graphic on the shroud so it is centered left to right and about a quarter inch up from the bottom.

6. While holding the graphic in place, apply the tape across the top of the graphic as shown.

7. Ensure the graphic is still properly centered and reposition if needed.

8. Flip the bottom of the graphic (opposite the tape) upward and carefully peel the protective film from the back of the graphic.

9. Flip the graphic back down into position and press it firmly onto the monitor shroud.

10. Carefully remove the pieces of tape from the top of the graphic.

11. Use window cleaner and a cloth to remove any fingerprints or marks from the graphic and monitor shroud.

12. Return the GamePad to the bracket above the showcase.

4.2 Replace Left Panel Graphic

1. Remove the Wii Remote and Nunchuk from the holders and place the cables over the top of the showcase so they are not in front of the lower left panel.

2. Use a label peeler to lift up the corner of the graphic, then pull it outward and down to remove.

3. Use window cleaner and a cloth to clean the surface for the new graphic. Let the surface dry completely.

4. Prepare two or three pieces of tape about two inches long each and stage them nearby, such as on the pedestal.

5. Without removing the film, position the new panel graphic so it is centered left to right and top to bottom.

6. While holding the graphic in place, apply the tape across the outside (left) edge of the graphic to fasten it to the panel.

7. Ensure the graphic is still properly centered and reposition if needed.

8. Flip the inside edge (opposite the tape) of the graphic outward and carefully peel the protective film from the back of the graphic.

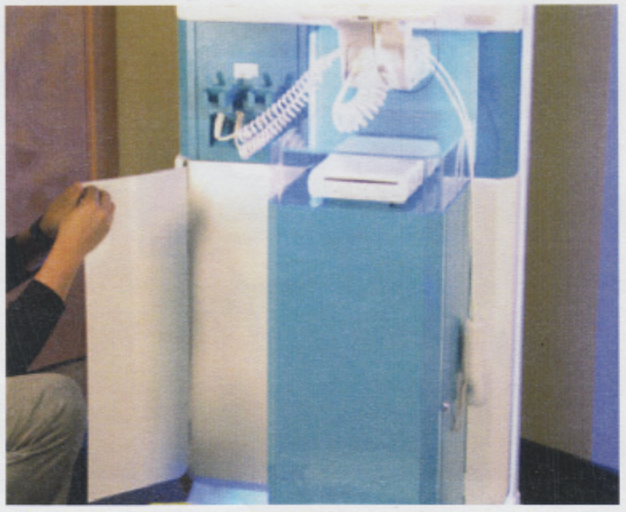

9. Flip the graphic back into position and press it firmly onto the panel.

10. Carefully remove the pieces of tape from the edge of the graphic.

11. Use window cleaner and a cloth to remove any fingerprints or marks from the graphic and lower left panel.

12. Return the Wii Remote and Nunchuk to the holders.

Do you have any questions or need assistance?

For help call 1-800-875-1852.